

DelayPlayRadio |

DelayPlayRadio *XT*

User Guide

The DelayPlayRadio *XT* can be used in one of 4 configurations:

Configuration 1. Component System

In a component system, you simply use RCA cables to connect the *XT* between the Tuner and the Pre-Amp (or Amp/Pre-Amp combo).

Configuration 2. Receiver System

If you will be adding the *XT* to an integrated receiver system, you have the option of using the receiver as either the AM/FM source or as the Speaker output, but not both.

Option 1: Receiver as the AM/FM source.

With this option, you can connect the receiver to the *XT* with either the 3.5mm cable running from the receiver's headphone jack to the *XT*'s Line In port.

-or-

If your receiver is so equipped, you can connect the receiver's RCA output jacks to the *XT*'s RCA In jacks.

-and-

You will have to connect a set of Powered Speakers like those commonly used with PC's or iPods.

Option 2: Receiver as the Speaker output.

With this option, you will connect the *XT*'s RCA Out jacks to the receiver's AUX In jacks.

-and-

Connect an AM/FM source such as a Walkman using the provided 3.5mm cable running from the Walkman's headphone jack to the Line In port on the *XT*.

Configuration 3. Standalone Setup

In this configuration, you will have to connect both an AM/FM source such as a Walkman AND Powered Speakers to the *XT*.

General Use Information:

OK, now that the unit is connected, plug in the power cable and you're ready to start enjoying what the *XT* does best...Delay!

A few hints:

Turn on your AM/FM source first.

Push the Delay On/Off button once you're ready to start using the *XT*.

The LED lets you know the Delay is on. It will also flash while the "buffer" is filling under certain circumstances.

The marks on the delay label are approximate. You can dial in the exact delay that works for your situation.



Warranty:

The DelayPlayRadio *XT* is guaranteed for 90 days against workmanship or defect under normal use.

Enjoy!